


# SCHAP

## SCHAP MANUAL CROCKMETER ASSEMBLY & OPERATION INSTRUCTIONS

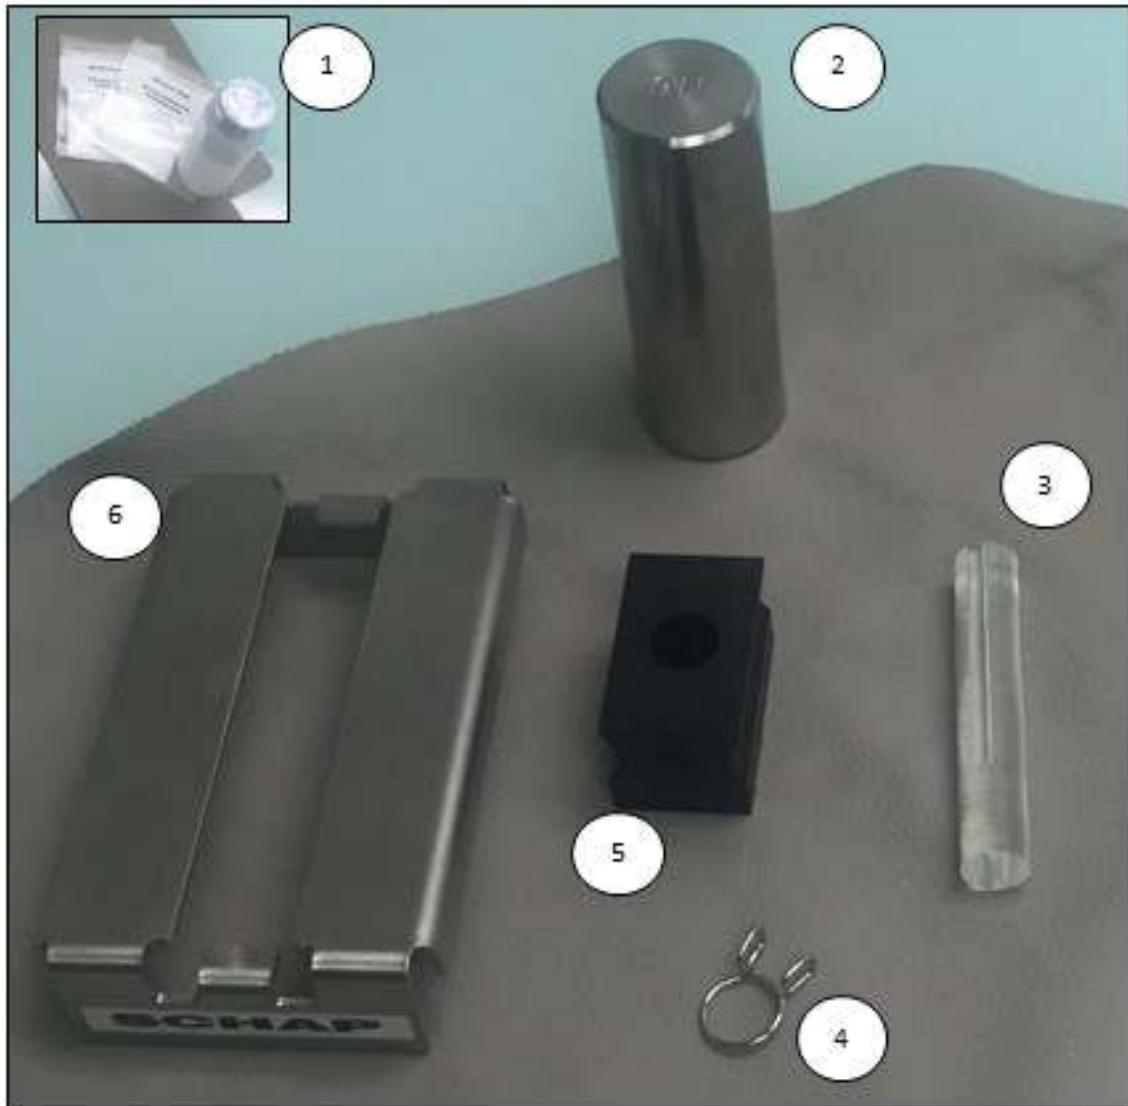

### PACKAGE CONTENTS

- |                    |                         |
|--------------------|-------------------------|
| 1. TESTER BASE     | 2. FINGER CARRIAGE      |
| 3. CROCKING FINGER | 4. TEST WEIGHT          |
| 5. SPRING CLIP     | 6. CROCKING ACCESSORIES |

# SCHAP


## STEP 1

Mount test cloth square with weave parallel to the direction of rubbing (per AATCC TM8). Secure with spring clip (loops upward away from test surface) to prevent inadvertent rubbing.



## STEP 2

Slide the finger carriage into the tester base as shown. Insert acrylic crocking finger into carriage while base is upside down.

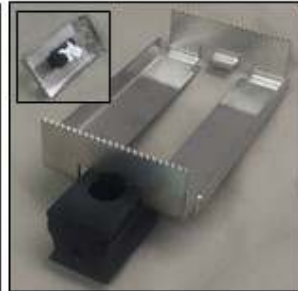

## STEP 3

Flip tester over and place test weight on end of acrylic finger. Use caution not to contaminate crock cloth test surface during assembly or movement of tester.



## STEP 4

Place assembled tester on test surface. Grasp the tester base and apply slight downward pressure. Using the other hand, slide the finger carriage until it stops at the end of the slot. The full stroke of the tester is 100 mm.



## STEP 5

Evaluate the color transferred to the crocking cloth with the appropriate gray or chromatic scale.

